



Terrace Outdoor Shutters


Assembly Instructions

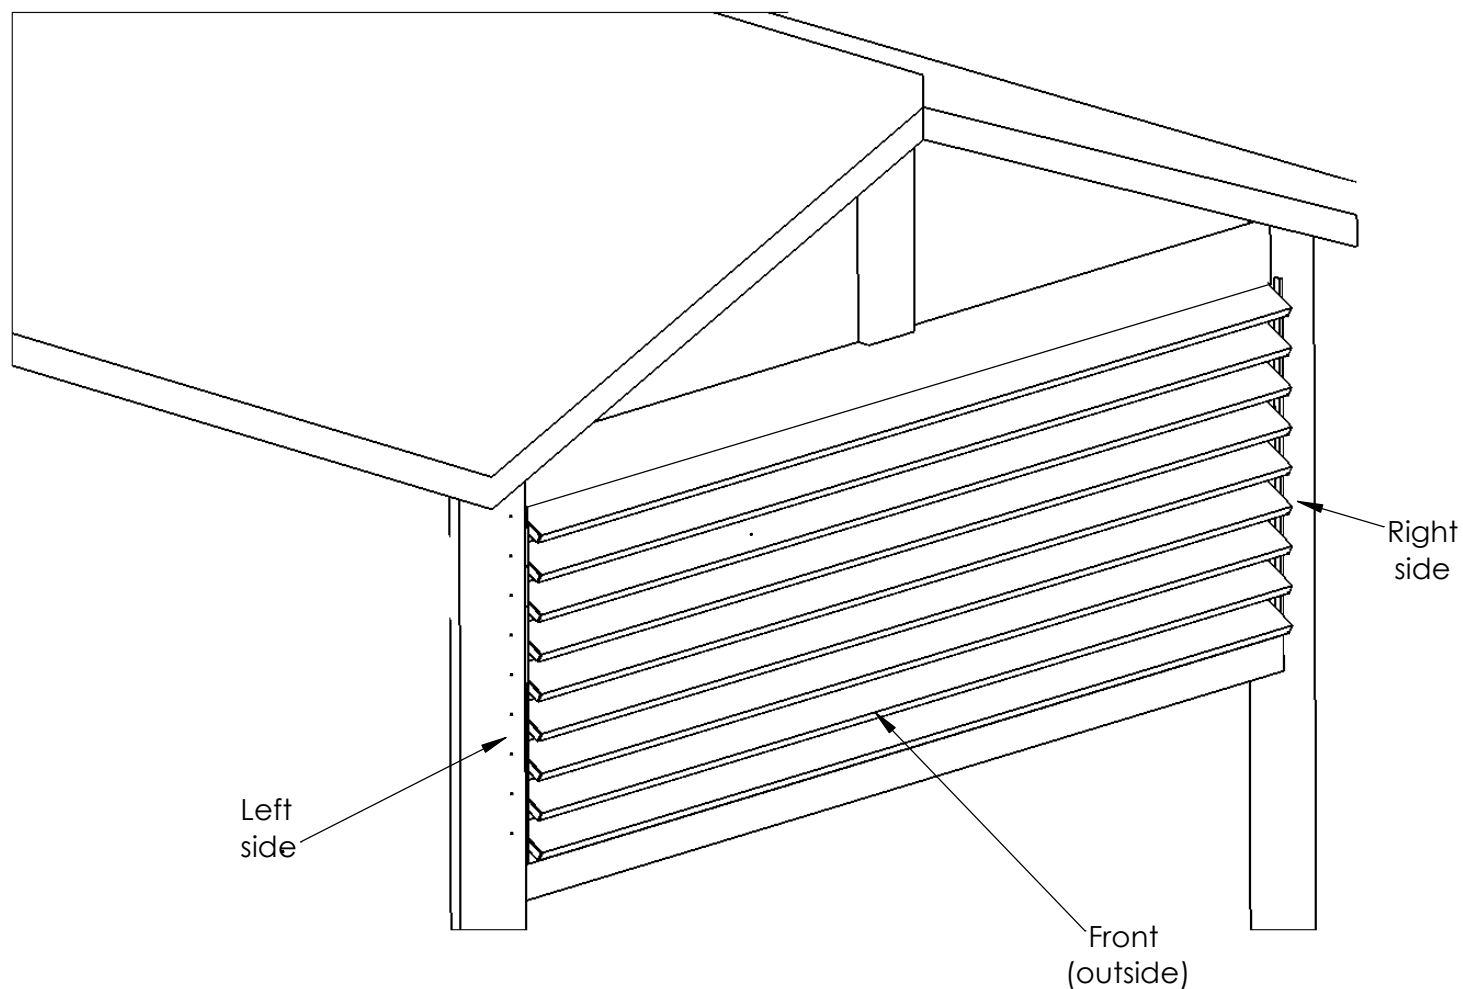

Required tools:

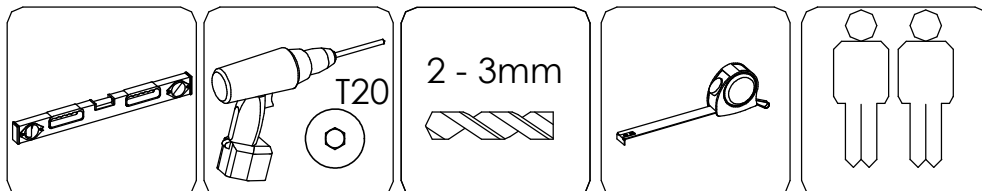

Included in the package:

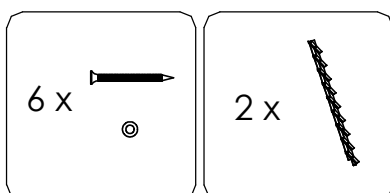


Terrace Outdoor Shutters

Assembly Instructions


1.

Shutter mechanism assembly must be done on the same plane, both vertically and horizontally.

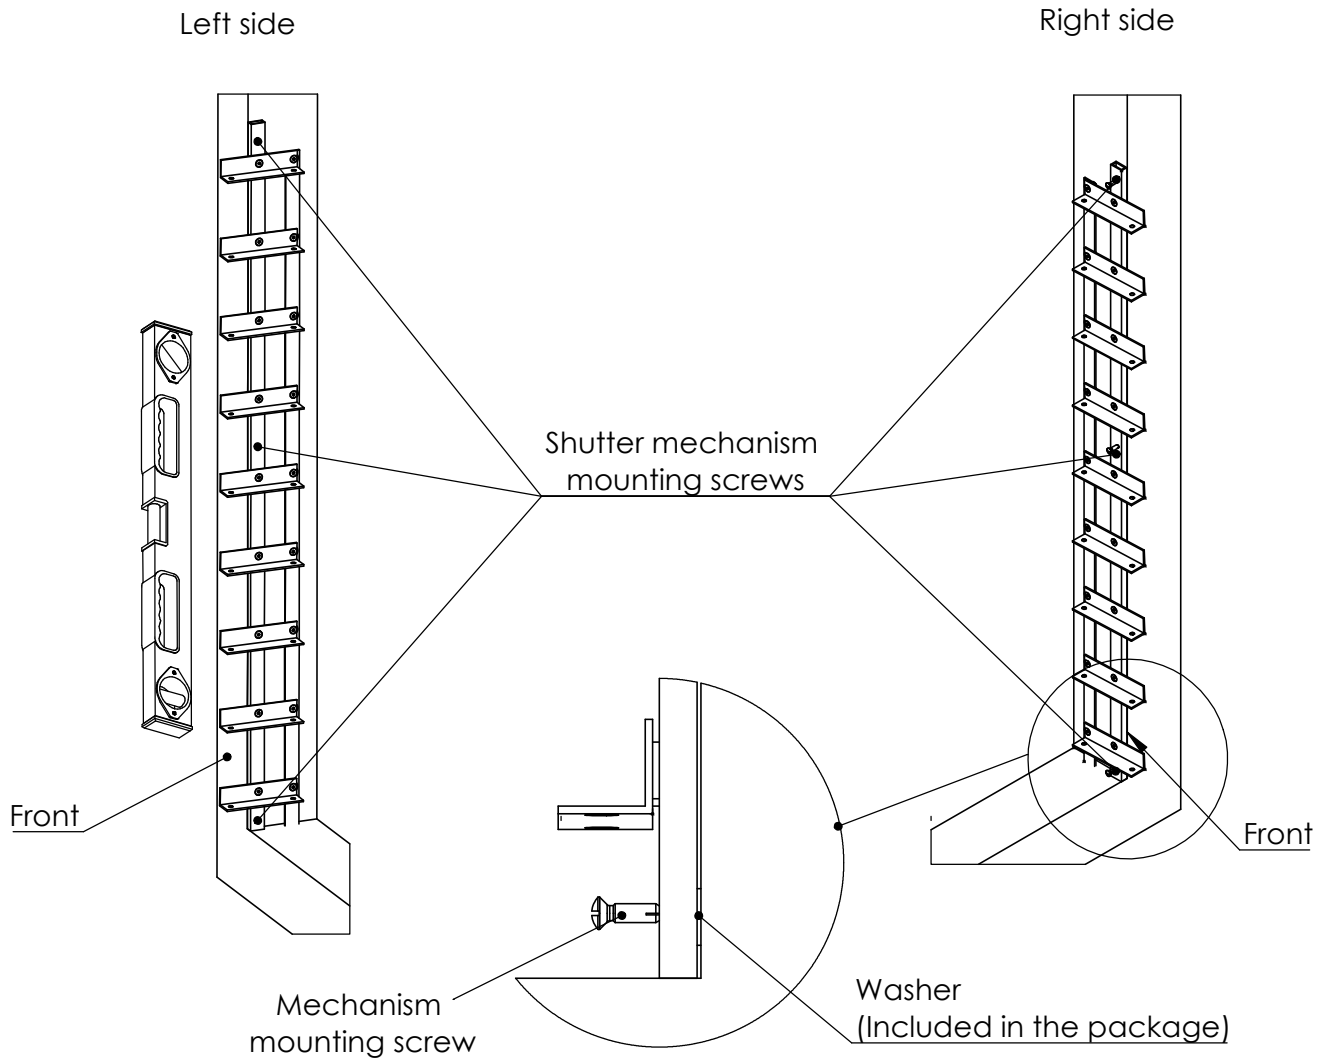


2.

- Boards must be cut so that their length is 1-2mm shorter relative to the center of the mechanism's angle iron.

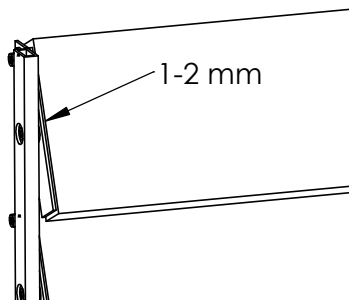

3.

- Boards should be assembled so that the center of the board aligns with the center of the mechanism's angle iron.
- Board assembly should be done by two people.
- Drill 3mm holes in the boards at screw locations.

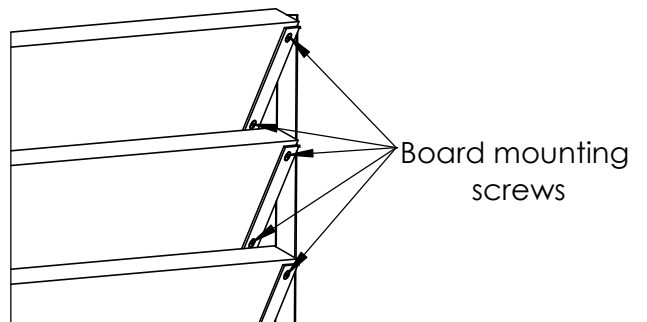

- Recommended board thickness for openings wider than 1.2m is 25mm.
- Screws for boards are not included; it is recommended to use stainless steel screws.
- Recommended board width is 110-130mm; using narrower boards will result in visible gaps when closed.
- It is not recommended to use boards longer than 3m.